

# ECO Steam Buddy



## Operating Instructions

### **IMPORTANT:**

PLEASE ENSURE YOU READ THESE INSTRUCTIONS CAREFULLY  
BEFORE USING YOUR ECO-STEAM BUDDY.


FAILURE TO DO SO MAY RESULT IN DAMAGE TO YOUR UNIT.  
NOT COVERED BY WARRANTY.

## **Some IMPORTANT Safety Guidelines:**

**In order to reduce the risk of electric shocks, fire and injury:**

- Do not leave the appliance plugged-in when not in use.
- Do not let children operate this appliance – The steam expelled is extremely hot!
- Do not use if the plug or cord is damaged in anyway.
- Do not use if the appliance has been left outdoors in rain.
- Do not use if the appliance is dropped.
- Do not unplug by pulling the cord – Always grasp the plug to remove from mains.
- Keep the power cord away from hot surfaces.
- Do not handle the plug with wet hands.
- Do not use if any of the outlets are blocked.
- NEVER direct steam toward people or animals.
- Do not carry or lift the appliance whilst in use.
- For indoor use only.
- Always unplug the appliance before re-filling.
- Only use clean water in the tank – Never use detergents or other cleaning chemicals.

## Parts List:

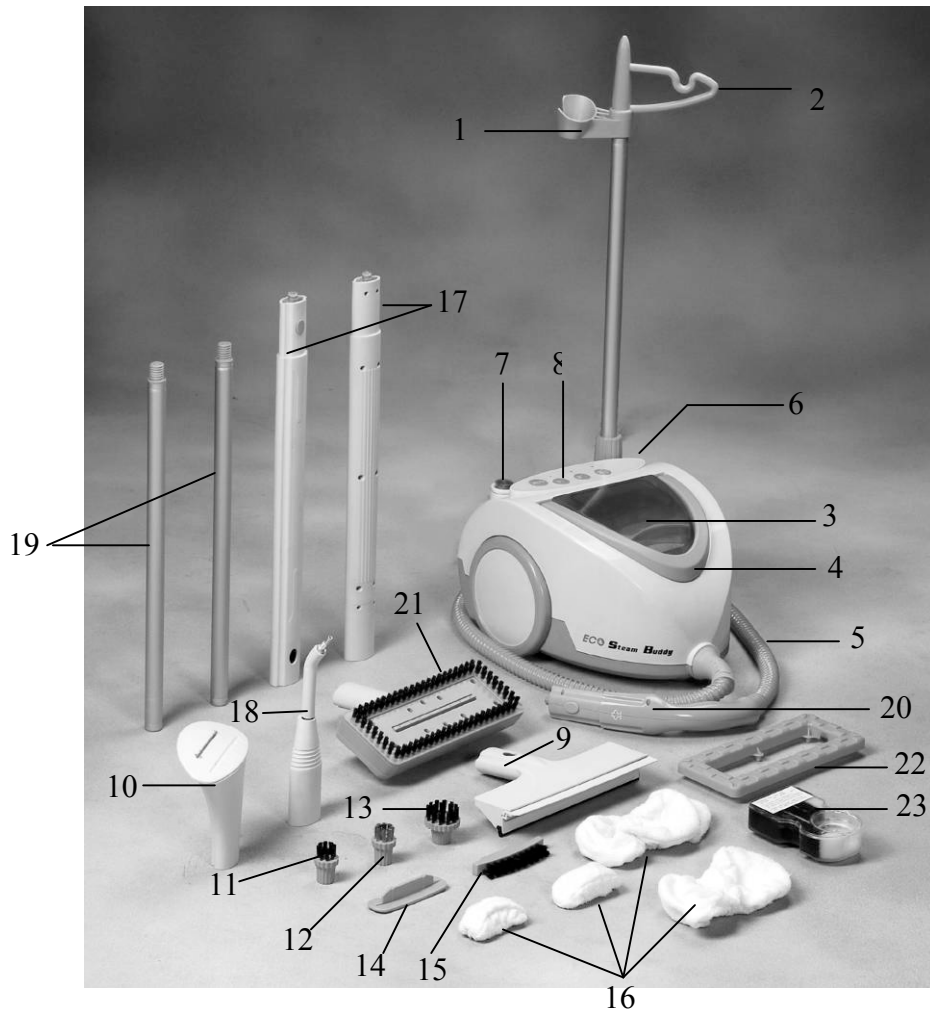

- |  |  |
|--|--|
| 1. Detachable holster for steam nozzle | 12. Wire brush                                   |
| 2. Garment hanger                      | 13. Large nylon brush                            |
| 3. Water tank                          | 14. Cleaning adapter for garment attachment      |
| 4. Carrying handle                     | 15. Brush for garment attachment                 |
| 5. Steam hose                          | 16. Cleaning cloths (4 pieces: 2 large, 2 small) |
| 6. Support for Upright Pole            | 17. Extension tubes (2 units)                    |
| 7. On/off switch with LED indicator    | 18. High-pressure cleaning nozzle                |
| 8. Control panel                       | 19. Extensions for upright pole                  |
| 9. Window/glass attachment             | 20. Steam gun with trigger                       |
| 10. Garment attachment                 | 21. Floor cleaning attachment                    |
| 11. Small nylon brush                  | 22. Cover for the floor cleaning attachment      |
|  | 23. Water filter                                 |

**Remove all packing and ensure all parts are present.**

## Usage Instructions:

### Using the Attachments:

#### Extension tubes (17)

Use these tubes for extending the nozzle on the steamer as follows:



1. Press and hold the button on the gun (part 20) and attach one extension tube (part 17). Slide on the extension tube until it clicks into location.
2. If you wish to use one more extension tube, repeat using the button on the end of the first extension.

#### Round brushes (12,13,14)

Three round brushes are supplied with the product (parts 12, 13, 14). Both black nylon brushes are suitable for cleaning difficult-to-access spots or gaps. The wire brush is suitable for highly dirty places.




Take care not to damage surfaces when using the abrasive wire brush!

To attach a brush:

1. Press and hold the button on the gun (part 20) and attach the nozzle (part 18) to the gun until it firmly fits into position.
2. Screw the desired brush attachment onto the nozzle.

**Note:** The nozzle can be used without brushes and will give concentrated, high-pressure jet

of steam for stubborn stains.

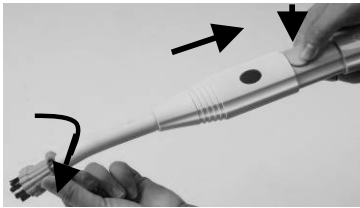

#### Floor attachment (21)

You can use the floor attachment with or without cloths. We recommend that the cloth covers be used for cleaning hard floors and no cores for carpets, rugs, etc.



To do this:

1. Attach the extension tubes as described above.
2. If needed, fit the cloth cover over the head and ensure it is secure using the clips, as shown left.

**Note:** Any cloth can be fitted to the cleaner head, not just those supplied with the machine. Simply use the clamps on top of the head to secure.



#### Window attachment (9)

1. If required, assemble the extension tubes and fit the glass cleaning attachment as shown in the diagram opposite.
2. Apply steam to the windows and wipe clean with the rubber squeegee on the head.

**IMPORTANT:** To prevent glass cracking, never steam clean windows on a cold day.

## **Garment brush (10)**


Garment brush can be hung from the hanger on the upright pole for steaming. Set pole to required height using the extension sections (part 19).



To use:

Assemble the upright pole to the required height and insert into the support on the back of the steamer.

Tighten the collar on the support to secure the pole.

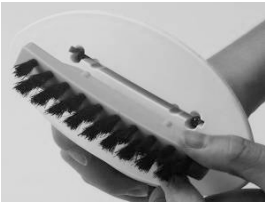


Using a coat hanger, hang garments on the hook on top of the pole.

Attach the garment cleaning attachment to the steam gun and add the required cleaning part if needed.

**Note:** If using the cleaning adapter, please ensure one of the small cloth covers is placed over the steam head.



When not in use, you can hook the brush into the holster as illustrated to the right.

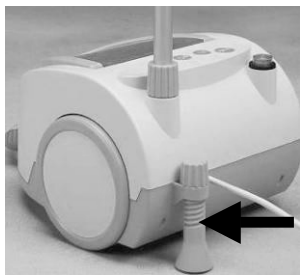

Ensure that the stabilizer is screwed down to the floor, as shown to the left, in order to prevent the machine from tipping when garments are hanging on the steamer.


## **Filling with water**



1. Lift the handle as shown.
2. Remove the water tank from the steamer completely.
3. Remove the filter from the air-tight packaging and make a note of the date of opening on the red label stuck onto the filter. Filter should be replaced each year.
4. Insert the filter into the steamer as shown.



**Note:** If there is a build-up of sediment or line scale in the filter or steamer, simply spray a jet of steam through the gun for 2-5 minutes to clean.

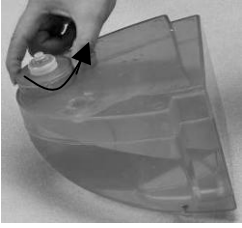

5. Turn over the tank and remove plug by turning anti-clockwise.
6. Fill the tank with water (max. 2 litres).
7. Screw plug back on tightly and ensure no leakage before placing back into the steamer.
8. Place water tank back into the steamer and push green handle down to lock into position.

### **Connecting and using the steamer**

#### **NEVER POINT THE STEAMER AT OTHER PEOPLE OR ANIMALS**

1. Attach the desired attachment to the appliance.
2. Place the steamer on a level surface.
3. Plug the steamer into a mains socket. Press the red on/off switch on the unit.
4. Choose steam level on the control panel:
  - i. low steam level
  - ii. medium steam level
  - iii. high steam level
5. Wait about 30 seconds for the steamer to heat up to operating temperature.
6. Press the steam release button on the steam gun to expel steam out of the fitted attachment.
7. To switch the appliance off, press on/off button and ensure LED light goes out.
8. If you wish to change the attachment, please unplug from the mains and let the appliance cool down before changing the attachment.

**Note:** Always test the steamer on an inconspicuous area before commencing cleaning to make sure the surface being cleaned will not be damaged by hot steam.

### **Refill the water**



**Allow the steamer to completely cool down before refilling the water tank.**

1. Switch off the device and unplug from the mains.
2. Let the appliance cool down before moving the water tank.
3. Remove the tank and follow filling instructions as detailed above.

### **After use**

1. Turn off the appliance after each use by pressing the red on/off switch.
2. Unplug from the mains after each use.
3. Let the steamer cool down before storage.
4. Wash the cleaning cloths as described under “Care & Maintenance”.

### **Care / Maintenance**



- Never immerse the appliance in water.
- Never use corrosive or abrasive cleaning agents.
- Never put any anti-lime scale agents or any other chemicals into the device when in use.
- Empty the water tank after each use.

To clean, wipe the appliance clean with a damp cloth if necessary. A mild cleaning agent may be used to clean the steamer. But ensure the steamer is completely rinsed before next use.

**Washing the cleaning cloths**

The cloths can be machine washed at up to 60° C and allowed to drip dry or be tumble dried.

**Troubleshooting**

Problem	Possible cause	Remedy
No steam	Appliance is not turned on, steam release not pressed, appliance not connected to power socket, or appliance not yet heated up.	Check if the steamer is connected to an outlet and turned on or if you press the steam release. The steamer has to heat up for about 30 seconds.
	Water tank is empty.	Fill the water tank with water as described under” Refill water”.
Instead of steam, water is coming out	The water is condensing in the tube.	Press steam release until steam is coming out. Lay a cloth under the steam openings as water can come out.

**Technical specifications**

Voltage: 120 V / 60 Hz / 1550 Watts

Protection grade: IPX4

